

# Simon XTi Quick Operation Guide


This is the Quick Operation Guide for the Simon XTi system (models 600-1054-95R-12 & 600-1054-95R-12-CN). The Simon XTi provides a graphical user interface for programming and system operation. A piezo siren is provided for alarm and status annunciation. A speaker and microphone is provided for 2-way voice communication with the central station.

## Operation

Use this document to quickly begin operating your Simon XTi security system. Refer to the Simon XTi User Manual for full operating details and programming options. To download the Simon XTi User Manual see “Contact information” on page 9.

**Note:** The default master code is 1-2-3-4 when the security system is shipped from the factory. You should change your code after your system is installed (see “Programming” on page 5).

To operate the security system:

- Use the home screen icons to arm/disarm the system when you enter or exit your home and to determine which sensors are active and the system status.
- Use the emergency screen to communicate with the central monitoring station to report police, fire, or emergency alarms.
- From the home screen, press the Status & Settings  icon to program certain user features. Refer to the Simon XTi User Manual for more information.

**Note:** Upon initial installation, the battery may not be fully charged for as long as 36 hours. A low battery icon will be present and trouble beeps will sound until the battery is sufficiently charged. After the initial charge, should the panel lose AC Power and experience a low battery condition, the icon will appear and trouble beeps will sound unless silenced. You can silence trouble beeps by:

- Arming or disarming the system.
- or
- Pressing the STATUS & SETTINGS icon and pressing LISTEN next to Panel Status.

This will disable the sounder for 4 hours but the trouble indication will remain until the battery is recharged.

Contact your installer to replace your backup battery.

This system is intended to be checked by a qualified technician at least once every 3 years.






 
## Home Screen


 
 





 
There are multiple ways to reach the Home screen (Table 1 below describes its features):

- By pressing the close icon. Depending on the screen you are currently on, you may need to press the close icon multiple times.
- After a period of inactivity, the Home screen will return (unless you set a blank screen as your default screen saver).
- If an alarm occurs, the screen will automatically return to the Home screen.

**Note:** The touch screen will automatically blank at 2:00 am daily for 60 minutes. Touch the screen to reactivate.

Table 1: Home Screen

| Icon   | Description   |
|--|---|
|    | Access the emergency screen to select the appropriate emergency icon (Panic, Police, or Fire).  |
| Time   | The current system time.  |
|    | Depicts the status of the AC power and battery. <b>Note:</b> These icons only appear in red on the main screen if the backup battery is not fully charged or AC power is not working correctly. |
|   | This yellow triangle indicates faults within the system.  |
|    | This will appear on the home screen in the event of an alarm. Messages will also display on this icon describing what caused the alarm. Press this icon to cancel the alarm.                    |
| <br> | Depicts monitored door status. A green check indicates all monitored doors are closed. A red exclamation point indicates one or more doors are open.  |

| Icon   | Description   |
|--|---|
|  *<br> *   | Depicts monitored window status. A green check indicates all monitored windows are closed. A red exclamation point indicates one or more windows are open.  |
|  *<br> *   | Depicts motions sensor status. A green check indicates no recent motion detected. A red exclamation point indicates motion was detected in the last 10 minutes.   |
|  *<br> *   | Depicts other changes to protected property in your system. A green check indicates all sensors are closed and no activity since you last checked. A red exclamation point indicates either a sensor is tripped, or there is unacknowledged activity.   |
|   | Press this icon to access the Arming Screen.  |
|  *<br> *<br> * | One of these icons will display depending on your arming level. Press to turn off intrusion/burglary protection for your system. Only intrusion/burglary sensors are disarmed. Environmental sensors, such as smoke and carbon monoxide detectors, stay active at all times Enter your code in the keypad screen that appears. If you enter an incorrect code, press the Clear icon and enter the correct code. |
|   | Press to access the Status & Settings screen.   |

**Note:** \* Pressing the above sensor icons will open a new screen to provide more detail. These icons may contain the text "N/A" which indicates your system is not configured to support this feature. Consult your dealer for additional information.

## Arming Screen

When you touch the PRESS TO ARM icon on the Home screen, the Arm screen appears with the following arming choices:



**Table 2: Arming Screen Icons**


| Icon                 | Description   |
|----------------------|---|
| Doors & Windows Only | This option activates perimeter sensor only.  |
| Motion Sensors Only  | This option activates interior sensors only.<br><b>Note:</b> Depending on your configuration, this option may not appear. |
| Arm All              | This option activates all sensors.  |

**Note:** You will see icons at the top of the screen depicting the current state of your installed sensors.

## Optional arming choices

These settings are optional (for more advanced arming features).

- **Silent exit.** Press this icon to silence your exit beeps during arming. (Your exit time will double).
- **Entry delay.** Press this icon to set your entrance timer to zero. (Use the No Delay feature when you are asleep, or when you are away from home and will carry a wireless touchpad that allows you to disarm the system before opening a protected


door). If you select the No Delay option,  (clock with a red strike through) will appear over the lock when the system is armed.

## Arming errors

If you select an arming option on the Arm screen, and there is an arming problem, an arming error message screen will appear, indicating what the problem is and how to correct it. For example, you might see a message that indicates that you need to close the front door.

Correct the problem as indicated or press Bypass. You will see the arming countdown message at the bottom of the screen. You can touch Cancel and enter your code to stop the arming process.


## Status & Settings Screen

To access the Status & Settings screen, press  on the Home Screen. Refer to Table 3 on page 3 for more information on Status & Settings screen options.

A gold icon indicates an option is selected.

A blue icon indicates an option is not selected.

**Table 3: Status & Settings screen options**

| Item  | Description   |
|---|---|
|  | Depicts the status of the AC power and backup battery. A red power cord represents loss of AC power to the system. A green power cord icon represents AC power to the system. A red battery icon represents a low battery charge. A green battery icon represents a fully charged battery.<br><b>Note:</b> These icons only appear on the main screen if the backup battery is not fully charged or AC power is not working correctly. It is recommended that the backup battery be replaced every 3-5 years. Contact your installer to replace the backup battery. |
| Event History   | Press the Show icon to view system events<br><b>Note:</b> If a # appears in the Event History list, the event was not sent to the central station.  |
| Direct Bypass   | Press the Select icon to enter the sensor bypass screen. Sensor can only be bypassed if actively armed.   |
| Panel Status  | Press the Listen icon to listen to the status of your security system. Press Clear to clear the status.   |
| Chime   | Press the On/Off icon to set the chime feature On/Off.<br><b>Note:</b> This option may or may not appear depending on panel programming.  |
| Special Chime   | Press the On/Off icon to set the special chime feature On/Off.<br><b>Note:</b> This option may or may not appear depending on panel programming.  |
| Lights  | Optional. Ask your dealer for more information.<br><b>Note:</b> Has not been investigated by UL.  |
| Door Locks  | Optional. Ask your dealer for more information.<br><b>Note:</b> Has not been investigated by UL.  |
| Voice Volume  | Press the arrows to adjust the speech volume level.   |
| Beep Volume   | Press the arrows to adjust the beep volume level.   |
| Brightness  | Press the arrows to adjust the screen's brightness.   |
| Default screen  | Use this feature to set this panel's screen saver mode. Select "Blank" to have the screen go dark after a period of inactivity. Otherwise, the default will be the Home screen and the screen will be lit. If AC power is lost, the screen will go blank after 2 minutes of inactivity to maximize battery life. The green AC power icon will blink.<br><b>Note:</b> The screen will automatically go blank at 2:00 am daily for 60 minutes.  |
| Calibration   | Press the Show icon to enter the calibration screen. This screen will allow you to recalibrate the touch screen.  |
| Help  | Press the Help icon to access the Help menu.  |
| Set Date/Time   | Press ENTER next to Set Date/Time to set the date and time. (A valid master code is required.)  |
| System Tests  | Press ENTER next to System Tests to access Sensor Test, Comm Test, and System Download options. (A valid master code is required.)  |

| Item        | Description  |
|-------------|--|
| Programming | Press ENTER next to Programming to access the programming menu. (A valid master code is required.) |
| Version     | Displays the system's firmware version, touch screen version and copyright information.            |

**To set the time**

1. From the Status & Settings screen, select Set Date/Time.
2. Enter access code.
3. From the Set Date/Time screen press the first box to set hour and press SAVE.
4. Press the second box to set minutes and press SAVE.
5. Press a.m/p.m. box to toggle a.m/p.m. setting.



**To set the date**

1. From the Set Date/Time screen press the first box in the second row to set the month and press SAVE.
2. Press the second box to set the day and press SAVE.
3. Press the third box and enter the year and press SAVE.
4. Press CLOSE repeatedly to exit.

**Emergency icon**

In an emergency, touch the Emergency icon. An Emergency screen appears (see Emergency icon in Table 1 on page 1). You will see three icons (Panic, Police, or Fire). Select the appropriate icon.

**Note:** If your system is connected to a security monitoring service, the authorities will be notified. This option may not be enabled. Contact your dealer for details.

If you initiate an emergency alarm by mistake, you can cancel the alarm by touching the red Alarm icon and entering your code within 30 seconds (typical time limit, contact your dealer for more information on your system configuration).

**Fire alarm verification**

If this option is off, the panel immediately reports to the central station when a smoke detector goes into alarm.

With this option on, if a single smoke detector goes into alarm, the panel will not report for 60 seconds unless another smoke detector goes into alarm. If the first smoke detector is cleared of an alarm within the first 60 seconds, no report will be sent to the central station unless it or a second smoke detector goes into alarm within the panel siren timeout period (5 minutes).

Ask your installer how this option is programmed.

## Arming and disarming

Use the steps below to arm and disarm your system:

### To disarm:

1. Press PRESS TO DISARM.
2. Enter your code when the keypad screen appears. If you enter an incorrect code, press the Clear icon and enter the correct code.

**Note:** You have four seconds between number presses to enter the code or you will be returned to the home screen.

### To arm Doors and Windows Only, Motion Sensors Only, or Arm All:

1. Press PRESS TO ARM.
2. Press DOORS & WINDOWS ONLY, MOTION SENSORS ONLY, or ARM ALL.
3. If a code is required, enter your code when the keypad screen appears.

The panel starts an exit delay and sounds exit beeps until the exit delay expires (see Table 4 on page 5).

## Unvacated premises

Unvacated premises is a feature that determines whether the system automatically arms down to level 2 (doors and windows) if you arm the system to level 4 (doors, windows, and motion sensors) without opening or closing a perimeter door (on), or remains at the armed level chosen (off). This feature does not work from a key fob. Autobypass must be on for this feature to work. Check with your installer to see how these options are programmed for your system.

## Swinger Shutdown

This setting determines if a sensor or zone will go into alarm only once during an arming period (an active arming level) and will not be active again until the alarm is canceled (Swinger Shutdown is enabled) or the sensor or zone will always be active and will go into alarm multiple times during an arming period (an active arming level) without canceling the alarm (Swinger Shutdown is disabled).

**Note:** Swinger Shutdown does not affect Smoke, Fire, Carbon Monoxide and Environmental sensors.

Ask your installer how this option is programmed and have them explain how it will affect your system operation.

## Exit/entry delay

Your Simon XT<sub>i</sub> provides a delay after entering or exiting your home before the system is armed or disarmed.

## Exit delay extension

If enabled by your installer, the exit delay extension feature will recognize when you arm the system, leave your house and then quickly reenter (for example, if you forget your car keys). If this happens, the system will restart your exit delay to give you the full exit delay again.

Ask your installer how this option is programmed.

## Alarms

The system provides annunciation to indicate an alarm condition. When an alarm is active, the home screen will display the alarm status (see Table 1 on page 1).

### To cancel the alarm



- If you would like to hear additional alarm information, press Listen.
- To cancel the alarm, press the red alarm icon and enter a valid master or user code.

After alarms are canceled, the system will be disarmed.

## System status

In the Status & Settings screen, press Listen (no code is required) to cause the system to speak the following types of information:

- Alarm conditions
- Alarm history
- Trouble conditions
- Open sensors
- Bypassed sensors

The  and  icons appear when abnormal conditions such as a trouble or open sensor exists in the system.

You can clear certain status entries from the system (such as old alarm history) by listening to the message or by pressing Clear next to Panel Status in the Status & Settings screen.

## Touchpads and key fobs

You can use touchpads and key fobs to control the security system from remote locations in and near your home. Interfacing with the system using a touchpad is similar to using the panel.

## Status beeps

The panel sounds status beeps to alert you to various system events and conditions as shown in Table 4 below.

**Table 4: Status beeps**

| Activity                  | Beep response   |
|---------------------------|---|
| Doors+Windows             | Exit delay and entry delay beeps sound two times every 5 seconds and two times per second during the last 10 seconds.     |
| Motions                   | Exit delay and entry delay beeps sound three times every 5 seconds and three times per second during the last 10 seconds. |
| Doors+Windows and Motions | Exit delay and entry delay beeps sound four times every 5 seconds and four times per second during the last 10 seconds.   |
| Disarm                    | One beep.   |
| Chime                     | Two beeps.  |
| Special chime             | Three beeps.  |
| Property/asset management | One beep. (Information displays only on the Two-Way Talking Touch Screen).  |
| Trouble beeps             | Six beeps every minute. Press Listen next to Panel Status to stop beeps for 4 hours.                                      |
| No activity beeps         | Twenty beeps every minute for 5 minutes (feature must be programmed by the installer).                                    |

## Alarm sirens

Exterior and interior sirens make three different alarm sounds on the premises, each indicating a different type of alarm. Sirens are programmed by the installer to time out and stop sounding after a specified time.

Table 5 below describes the siren sounds used by the security system.

**Table 5: Siren sounds**

| Function                 | Fire       | Intrusion | Emergency   |
|--------------------------|------------|-----------|-------------|
| Interior and panel siren | Temporal 3 | Steady    | Fast on/off |
| Exterior siren           | Temporal 3 | Steady    |             |

**Note:** Temporal 3 refers to a continuous pattern of three siren pulses, then off for 1.5 seconds, three siren pulses, then off for 1.5 seconds.

## Trouble beeps

Your security system is able to automatically test itself for:

- Power failures
- Low batteries
- Sensor supervision
- Communication trouble with the central monitoring station

When your system detects one of the problems above, six rapid beeps sound every minute until the trouble condition is corrected. To stop the trouble beeps, enter the Status & Settings screen and press Listen. Trouble beeps will resume 4 hours later unless the trouble condition is corrected.

## Programming

Your Simon XT<sub>i</sub> security system allows you to program certain user options, such as access codes.

### To enter programming mode:

1. From the Status & Settings screen, scroll down to the Programming option and press Enter.
2. Enter the access code and press OK.

### Access codes

#### To add/edit access codes:

1. From the Programming screen, press ACCESS CODES.
2. To add or edit an access code, press the white field next to the access code.
3. Enter the new/edited code on the numbered keypad and press SAVE.
4. Press CLOSE repeatedly to exit menus.

### Chimes

Use the chime feature to signal when a protected door is opened while the system is disarmed. The panel chimes when a chime sensor is tripped, if the chime mode is enabled. This feature allows you to be notified when family members are going in and out of your home. The chime feature is turned on or off in the Status & Settings screen.

**Note:** If there are no chime sensors in your system, you will not be able to enable the chime feature.

Your installer may have programmed the system to speak the sensor name or make a custom chime sound when a chime sensor is tripped. The chime sound, if programmed, will be played in place of the standard chime beeps.

### To enable or disable the chime feature:

1. Open the Status & Settings screen. The gold icon indicates an option is selected.
2. To change the value, press On or Off next to Chime (depending on the settings your installer programmed, it may not be possible to turn on the feature).
3. Press Close to exit.

### Special chime

The special chime feature allows you to install motion sensors in a patio or at the front door, and be notified when someone is approaching those areas. These motion sensors are not used for intrusion protection. The panel will chime, if the special chime mode is enabled.

**Note:** If there are no special chime sensors in your system, the special chime option will not appear in the Status & Settings screen.


### To enable or disable the special chime feature:

1. Open the Status & Settings screen. Scroll down until you find the Special Chime feature. The gold icon indicates an option is selected.
2. To change the value, press On or Off next to Special Chime.
3. Press Status to exit.

### Cross-zoning

Cross zoning (two-trip) refers to two different motion sensors that must be tripped within two minutes of each other to report an alarm to the central station. The Cross-zoning figure shows the path of a person walking from the kitchen to the living room. When the person is detected walking through the kitchen, the motion sensor in the kitchen is tripped, sounding a local alarm. If motion is detected by the living room motion sensor within two minutes, an alarm report will be sent to the central station.

Figure 1: Cross-zone diagram

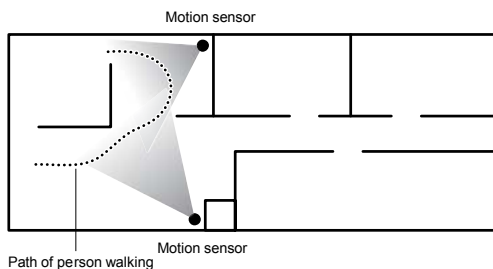

## System tests

### Sensor test

You should test sensors one at a time to make sure they are sending strong signals to the panel. You should test the sensors at least once a week.

### To perform the sensor test:

1. Enter the Status & Settings menu.
2. Scroll until System Tests is listed, Press Enter.
3. Enter your master code and press OK.
4. Press Sensor Test. All sensors learned into your system will be listed
5. Test any sensor you want by tripping the sensor (see Table 6 below for details on how to trip each device).
6. The display will update with the total number of packets received from each individual sensor (see Table 6 below for minimum number of packets required).

Table 6: Tripping sensors for sensor test

| Sensor                                     | Instructions   | Minimum packets required |
|--|--|--------------------------|
| Hardwire contact                           | Open the hardwire contact.   | 1                        |
| Door/window                                | Open the secured door or window.   | 6 of 8                   |
| Carbon monoxide alarm <sup>a</sup>         | Press and hold the Test/Hush button (approximately 5 seconds) until the unit beeps two times, and then release the button.   | 6 of 8                   |
| Glassbreak <sup>a</sup>                    | Test with an appropriate glass break sensor tester.  | 6 of 8                   |
| Motion sensor                              | Avoid the motion sensor field of view for 5 minutes, and then enter its view.  | 6 of 8                   |
| Smoke                                      | Press and hold the test button until the system sounds transmission beeps.   | 6 of 8                   |
| Key fob                                    | Press and hold the Lock and Unlock buttons simultaneously for 3 seconds.   | 6 of 8                   |
| Simon XT talking touch screen <sup>a</sup> | For sensor testing a 1.0. touch screen, press and hold the Emergency icon for 5 seconds. For sensor testing a 1.1 or greater touch screen, press the Settings (gear) icon, scroll down, and then press the RF Test icon. | 6 of 8                   |

a. Not investigated for use by UL.

**Note:** Refer to specific sensor installation instructions for complete operation and testing details.

### Sensor testing notes

- Conduct sensor test in all possible environmental conditions (For example: interior doors open and closed, HVAC system on and off, wireless music system turned on and off).
- Conduct sensor test whenever changes are made to the installation environment that may impact RF performance (For example: mirrors installed, metal backed wall paper, addition of other RF equipment).
- If a sensor doesn't meet minimum packet requirements, contact your installer.

### Comm test

The comm test is used to check proper communication.

**Note:** If Comm Test is not finished, it will continue to run even if you exit program mode.

#### To perform a comm test:

1. Enter the Status & Settings menu.
2. Scroll until System Tests is listed, Press Enter.
3. Enter your master code and press OK.
4. Press Comm Test.

The panel displays if the comm test was successful or not.

### Central station communication

After performing sensor tests, check that the system is reporting alarms successfully to the central station.

#### To test communication with the central station:

1. Call the central station and tell the operator that you will be testing the system.
2. Arm the system.


3. Test an emergency panic icon and trip at least one sensor of each type (fire, intrusion, etc.) to verify that the appropriate alarms are working correctly. There could be a 30 second delay on intrusion devices.
4. When you finish testing the system, call the central station to verify that the alarms were received.

**Note:** If your system is not connected to a central monitoring station you won't be able to perform the communication test.

### Emergency planning

Since an emergency is always unexpected, you should develop plans to help prepare for a variety of emergencies. Periodically discuss and rehearse emergency plans to include the following:

- Understand how to use your security system.
- Know the normal state of doors and windows: open, closed, or locked.
- Escape fast! (Do not stop to pack).
- Use a different escape route if closed doors feel hot to the touch.
- Crawl and hold your breath as much as possible to help reduce smoke inhalation during your escape.
- Meet at a designated outdoor location.
- Emphasize that no one should return to the premises if there is a fire.
- Notify the fire department from a neighbor's phone.
- Emphasize that no one should enter the premises if they hear sirens in the house.
- If you arrive at the premises and hear sirens, do not enter. Call for emergency assistance with your cell phone, or from a neighbor's phone.

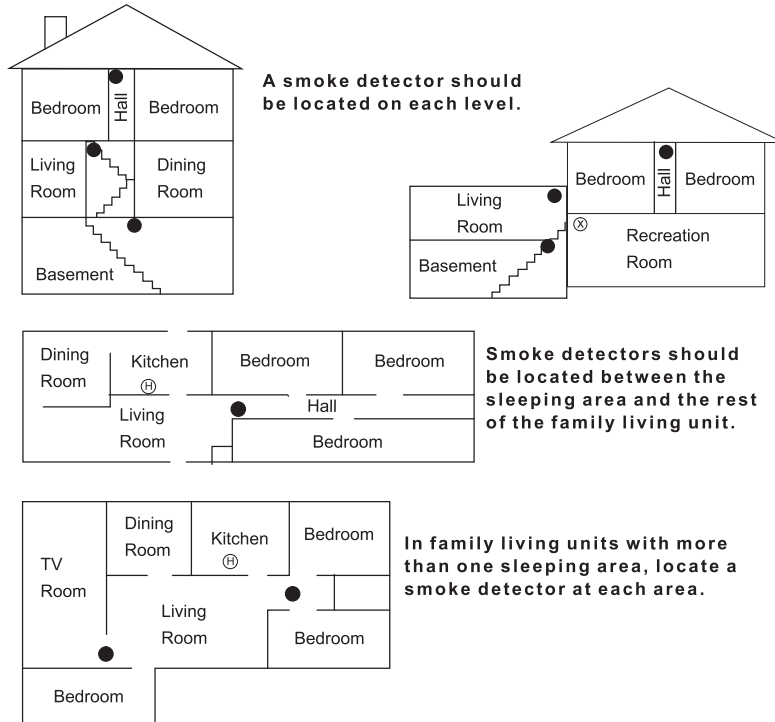

**NOTE:** Ceiling-mounted smoke detectors should be located in the center of the room or hall, or not less than 4 inches from the wall. When the detector is mounted on the wall, the top of the detector should be 4 to 12 inches from the ceiling.

**NOTE:** Do not install smoke detectors where normal ambient temperatures are above 100°F or below 40°F. Also, do not locate detectors in front of AC/ Heat registers or other locations where normal air circulation will keep smoke from entering the detector.

**NOTE:** Additional information on household fire warning is available at nominal cost from: The National Fire Protection Association, Batterymarch Park, Quincy, MA 02269. Request Standard No. NFPA74.

- Required smoke detector
- ⊕ Heat detector
- ⊗ Indicates smoke detector is optional if door is not provided between basement and recreation rooms.

**Your floor plan**

Use the following guidelines when drawing your floor plan:

- Show all building levels.
- Show exits from each room (two per room are recommended).
- Show the location of all security system components.
- Show the location of any fire extinguishers.

**Cleaning the touch screen**

If necessary, use a soft cloth to clear smudges on the touch screen; do not use glass cleaner on the touch screen.

**Disposal**

Dispose of all equipment in accordance with local requirements. Contact your installer for more information.



## Support

There may be additional features or programming options for your system depending on how it was installed. Contact your dealer or UTC Fire & Security for more information.

## FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 15 registration number: B4Z-910C-SIMON  
IC: 1175C-910CSIMO

Part 68. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA.

FCC registration number: US: B4ZAK02B55910

Canada: 1175C-910CSIXT  
Ringer Equivalence 0.2B  
Load Number 0.2

## Contact information

[www.utcfireandsecurity.com](http://www.utcfireandsecurity.com) or [www.interlogix.com](http://www.interlogix.com)

For customer support, see [www.interlogix.com/customer-support](http://www.interlogix.com/customer-support)

© 2013 UTC Fire & Security Americas Corporation, Inc.  
Interlogix is part of UTC Climate Controls & Security,  
a unit of United Technologies Corporation.  
All rights reserved.



466-2450

Printed in Mexico